
### Parts List Grass Catcher



SENSATION MOWER, INC.

Ralston, Nebr.

U.S.A.

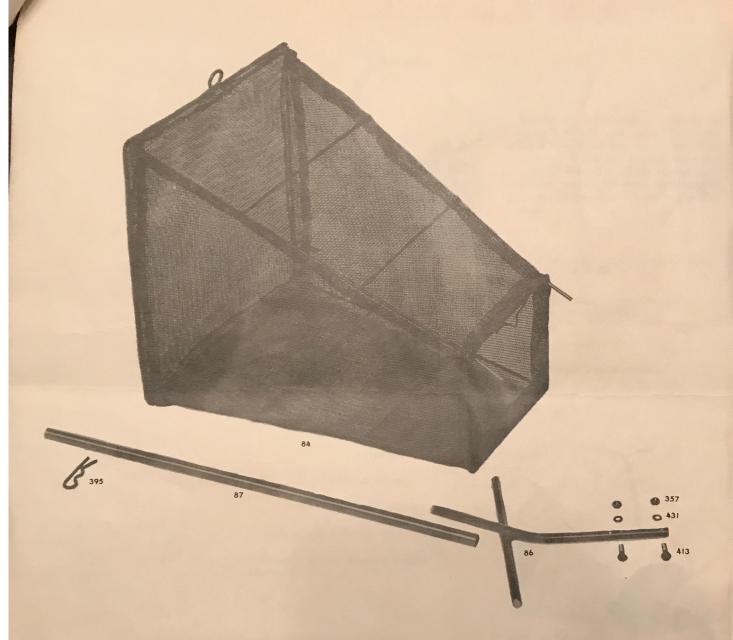

Illustrated on Mow-Blo 20G-5

# Grass Catcher



You have your choice — to MULCH or to CATCH your grass . . . with Sensation Mow-Blo or Econo-Mow mowers. If for any reason you want to catch the grass, a light strong grass catcher can be attached. Grass catchers are pictured and described on this page.

- For all Mow-Blo and Econo-Mow models all sizes Gas or Electric.
- 2. Impact (air-Blast) loading provides high capacity. Vacuum cleans yard.
- 3. Quickly detachable for emptying.
- 4. Chassis supports load. No handle interference.
- 5. Angle of attachment keeps grass catcher out of operator's path.
- 6. Catches grass clippings, weed seed pods
- 7. Picks up leaves.
- 8. Steel trame, mesh covered.
- 9. Weighs only 3 pounds. Easy to empty.
- 10. Individually boxed. Shipping weight 11 pounds.



Illustrated on Econo-Mow P21GP

FORM NO. 6032

Manufactured by

SENSATION MOWER, INC.

Raiston, Nebraska

Phone. ORchard 2700 (Omaha Exc

PIONEER MANUFACTURER OF ROTARY LAWN MOWERS AND SNOW-BLOS
ELECTRIC AND GASOLINE POWERED

## INSTRUCTIONS FOR INSTALLING SENSATION ON 18" & 20" MOW-BLO MOWERS

#### Reference:

Serial Number 58608 on all 20" Mow-Blo Serial Number 57076 on CP 18 Mow-Blo Serial Number 56909 on 18GC Mow-Blo

For the purpose of these instructions, all Mow-Blo units with serial numbers lower than those shown above will be referred to as "early models".

On early models the metal plate on bottom side of discharge spout must be cut and turned up. Grass Catcher will not fill properly without this being done. On later models this is standard equipment.

To rework plates on early models simply cut plate back at rear of spout about 2" and bend up 1".

On CP18 and 18GC Mow-Blos, early models, mounting holes for cross frame must be relocated. Template (or pattern) is attached. This is to do away with long extension bolt for wheel and riser block that was previously used.


#### To install Grass Catcher:

- 1. Mount cross frame "A" on top of discharge spout with bolts provided.
- 2. Insert 24" piece of tubing "B" over end of cross frame "A" line up holes in cross frame & Tubing, & insert hair pin "C".
- 3. Fasten basket on frame by first slipping ring at large end of basket over tube and then inserting extensions at small end of basket into hole in cross arm "A".
- 4. Insert hair pin "A" into hole in tube behind ring on basket. Grass Catcher is now ready for use.
- 5. To remove basket to emply, simply remove hair pin "D" from tube and slide basket off of frame.

(OVER)

SENSATION MOWER, INC.

RALSTON, NEBRASKA

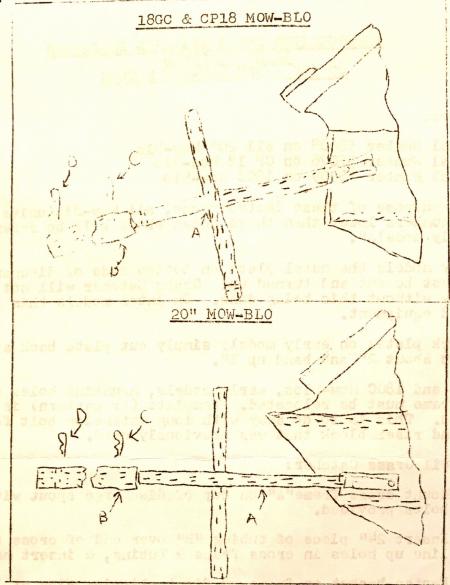

### GRASS CATCHER


Part No.	No. Price Used Item Each
85-A 84-A 84-B 84 86 87 357 295 413 431	Grass Catcher Assy., Complete \$ 9.95 Frame, Wire 3.75 Mesh Cover 6.00 Basket, Grass Catcher 7.95 Bracket, Mounting 1.80 Arm, Extension Bracket 95 Nuts, Hex, ½ NF 05 Clip, Basket Stop 23 Cap Screw, ½ x 3/4" NF 07 Washers, Lock ½ Med. 06
	SENSATION MOVED INC

SENSATION MOWER, INC. RALSTON, NEBRASKA

(OVER)

Page 3.

Template to relocate holes for proper mounting of Grass Catcher cross frame on 18GC & CP18 Mow-Blo.

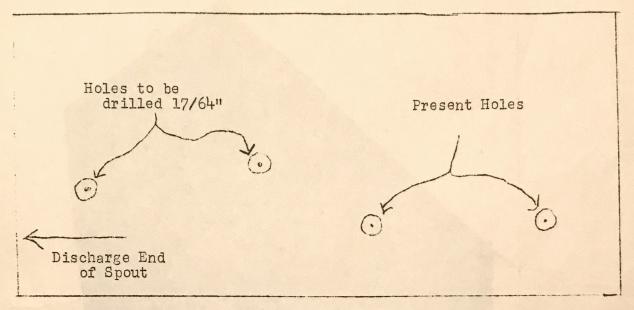

Locate circles marked "Present Holes" exactly over holes now in your casting. An easy method of holding this template in place is to insert bolts through "Present Holes" in template and on through the casting holes.

With the template firmly in position, mark casting at the two circle marked "Holes to be Drilled."

SENSATION MOWER, INC.


RALSTON, NEBRASKA




ELIMINATES RAKING, PILING, BURNING AND HAULING AWAY. SAVES THE BACK-BREAKING, TIME-CONSUMING WORK OF OLD FASHIONED LEAF DISPOSAL.

Leaves contain nitrogen, phosphorous, potassium, calcium and other plant-food elements. These are the materials essential for better lawns. Don't BURN your leaves! Put them to WORK ON YOUR LAWN!







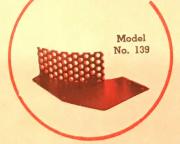

		Approximate Weight (Lbs.)		
		Net	Ship.	Price
Model No. 18	Fits all 18" Mow-Blo & Electra-Blo mowers.	1	2	\$
Model No. 139	Fits all 19" & 20" Mow-Blo & Electra-Blo mowers.	1	2	\$
Model No. 14-LM		5	7	\$
Model No. 17-LM	Fits 18" & 20" Mowers other than Mow-Blc and Electra-Blo.	61/2	81/2	\$
Model No. 20-LM		8	10	\$

Continual progress is a tradition with SENSATION . . . Because of this, the mower you receive may have improvements not shown here.